




OLPC XO-4 Touch Power Button Replacement

Install the power button.

Written By: Matthew Smith

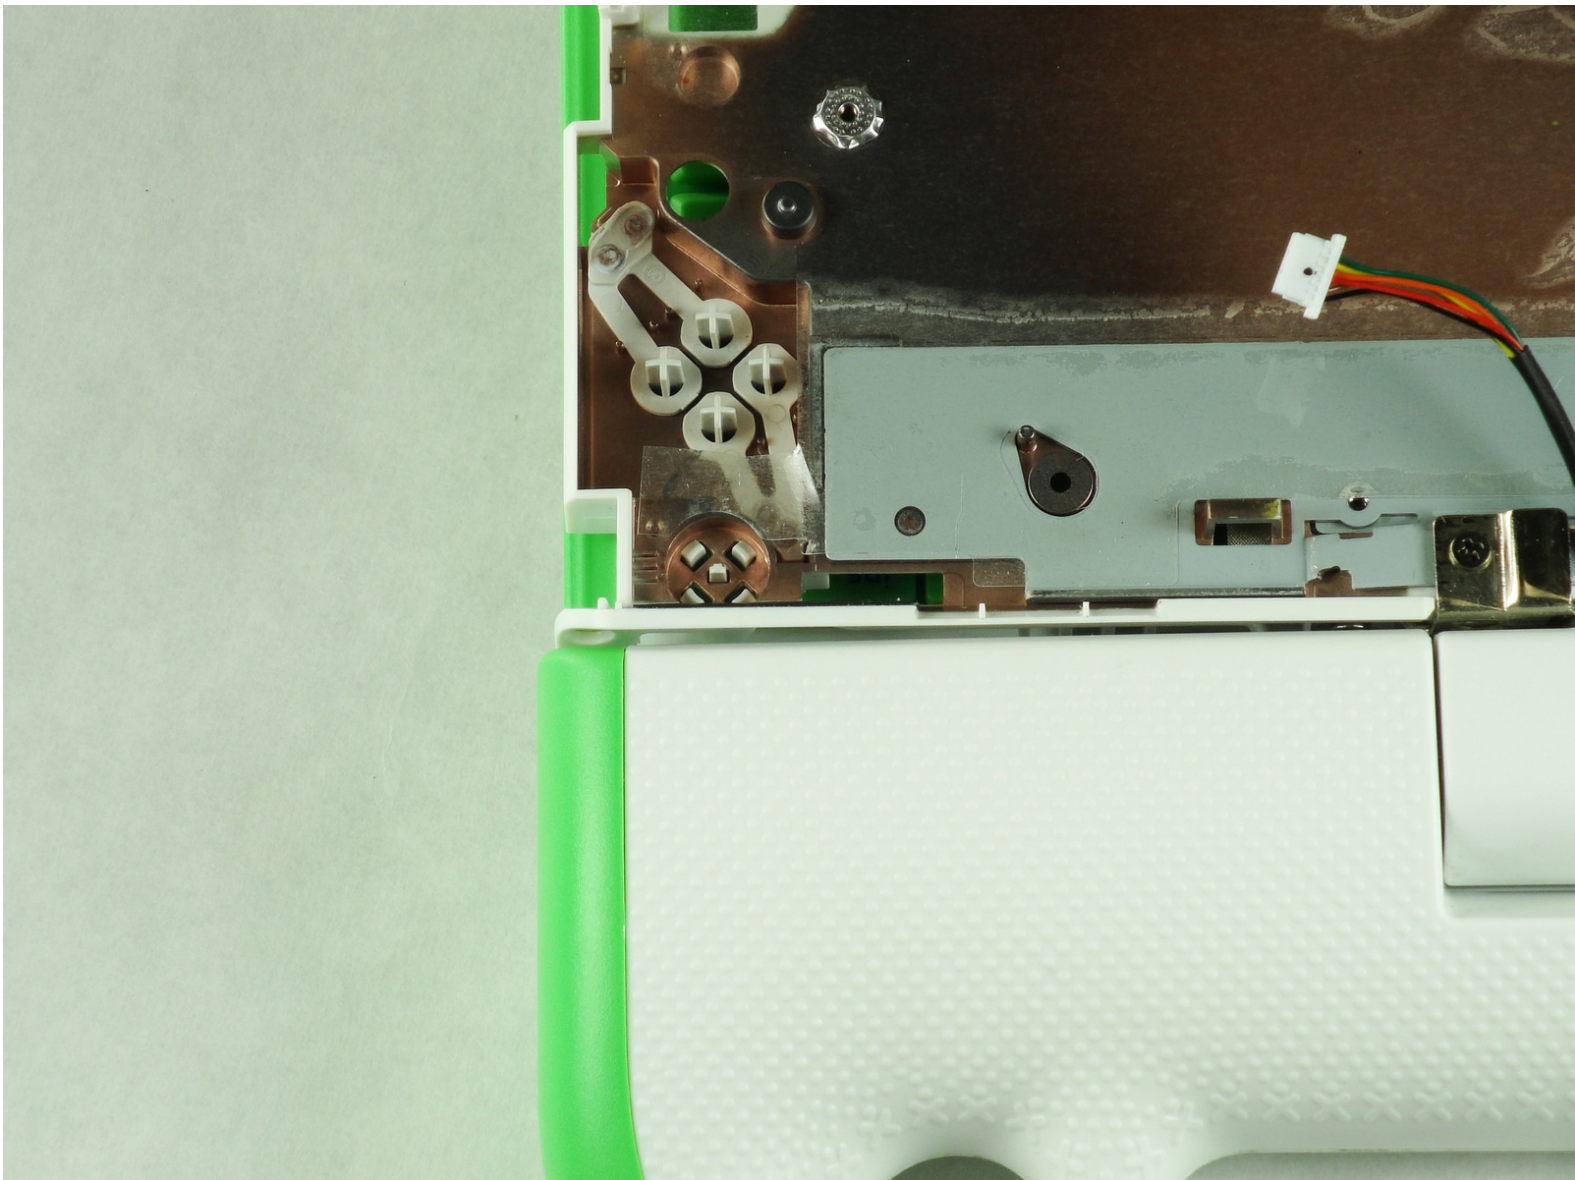

INTRODUCTION

Learn how to install the power button on the OLPC XO-4 laptop.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn the laptop upside-down, with the handle facing away from you.

Step 2




- Pull the lock tabs towards the green outer edges of the laptop.
- Hold the left lock tab in the unlock position until the battery is completely removed in the next step.

Step 3



- Lift up on the middle of the battery to remove it from the device.

Step 4 — Screen Frame

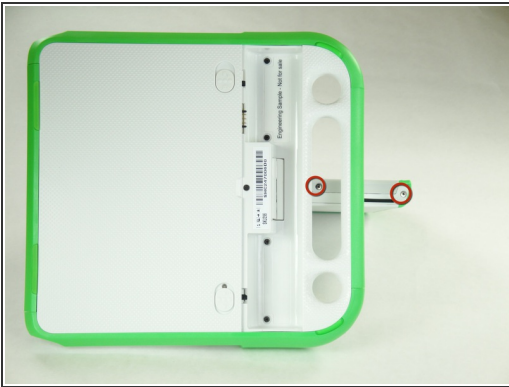

- Remove the two 4mm Phillips #1 screws underneath the screen on the right-hand side.
 - Rotate the screen 180° and remove the other two screws.
- i** You will have to put your screwdriver through the handle in order to reach the middle screw for both sides.

Step 5





- Remove the green side panel by pressing down on the small green button on the top and sliding the panel up.
- Repeat the step above for the panel on the other side.

Step 6



- ⚠ Be careful not to pull the bottom too far out because a ribbon cable is under the frame and can easily break.
- Gently lift up the lower part of the frame and pull it down to free the screen frame.

Step 7

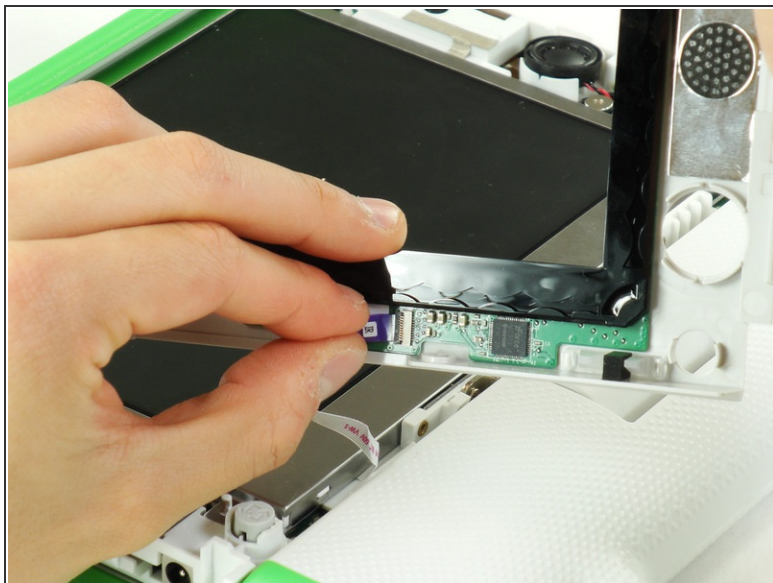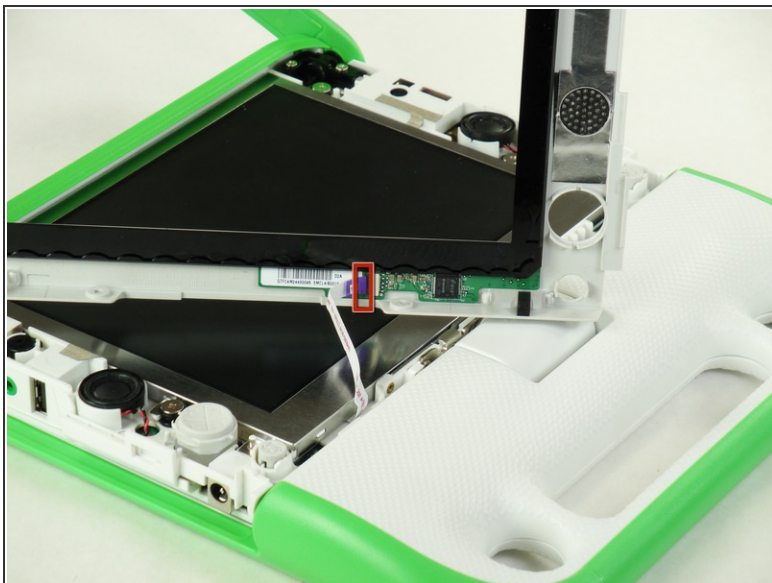

- Lift the black connector and pull the ribbon cable out by the purple tab, freeing the frame.

Step 8 — Screen



- Remove the four 7.62mm screws using a Phillips #1 screwdriver.


Step 9



⚠ Be careful not to pull the screen out too far. There are two ribbon cables attached to the screen, and they can easily break.

- Carefully lift the screen out.

Step 10

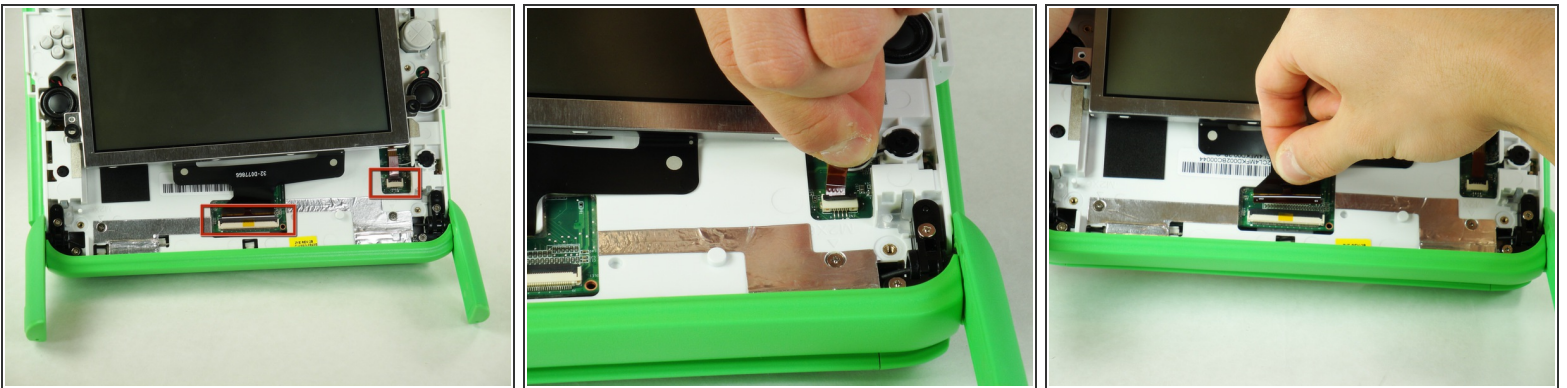

ⓘ Notice that the laptop in this picture has been turned 180° with the antennas now below the screen.


- For each ribbon cable, lift up the black connector and gently pull the ribbon cables out by the plastic tabs.

Step 11



- Remove the screen from the laptop.

Step 12 — Back Cover

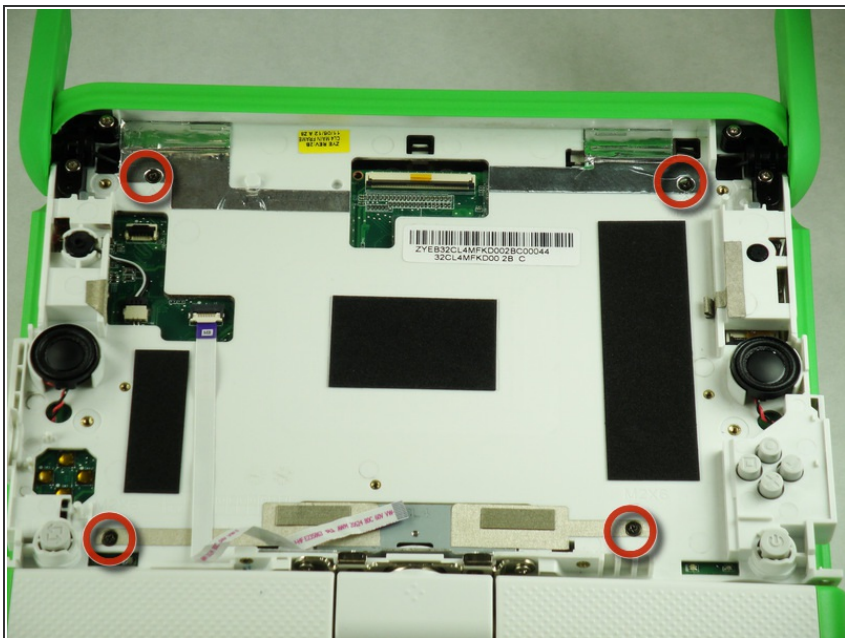



- Remove the four 6mm screws using a Phillips #1 screwdriver.

Step 13



- Rotate the top half of the laptop so that the back cover is facing you.
- Pull up the tabs on the lower part of the back cover and pull it down and away from the antennas.
- Remove the back cover by gently lifting it off of the laptop.

Step 14 — Wireless Card

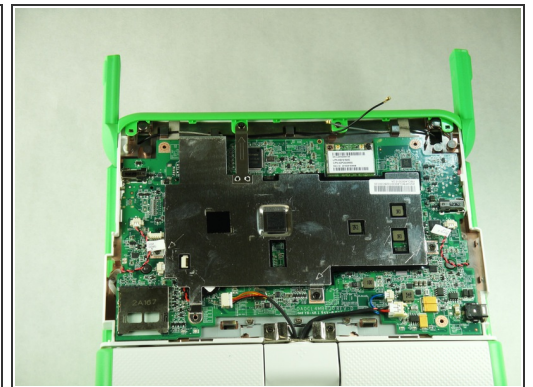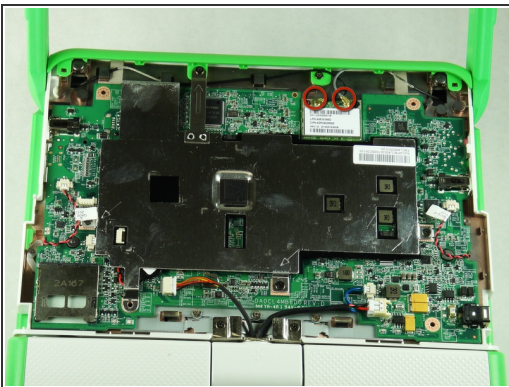

⚠ When pulling out the connectors, make sure to hold the metal connector instead of the wire.


- Gently pull out the two antenna connectors by pulling them away from the motherboard.

Step 15






- Remove the black 4mm Phillips #1 screw holding the wireless card in.

Step 16

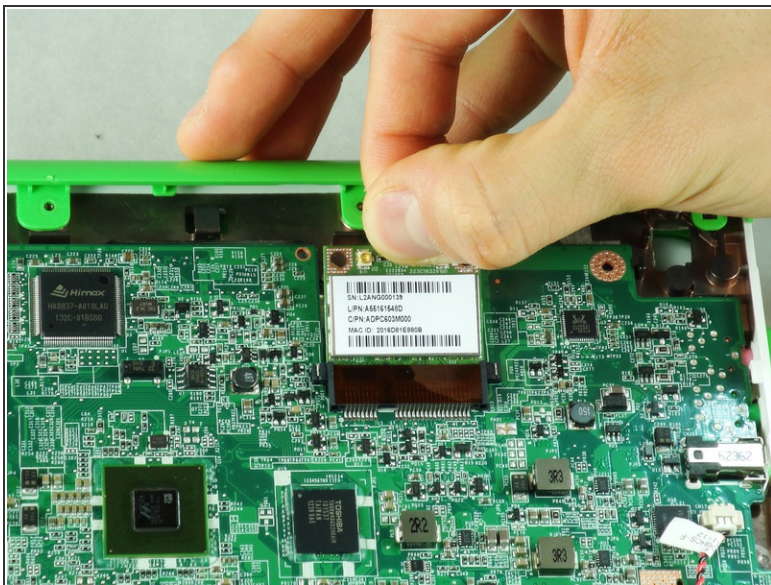




- Remove the wireless card from the laptop by gently sliding it out of its socket.

Step 17 — Motherboard

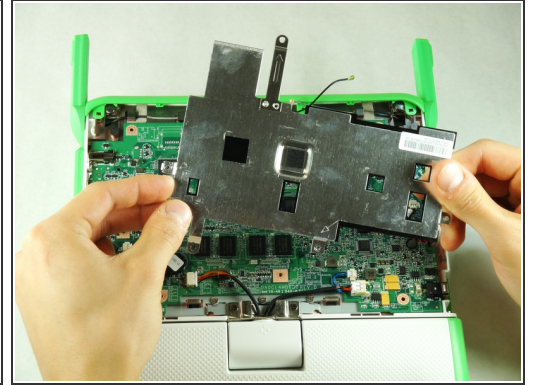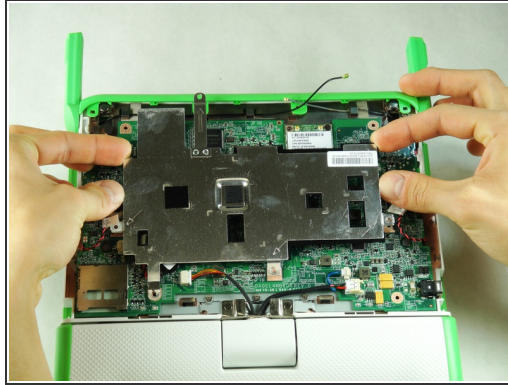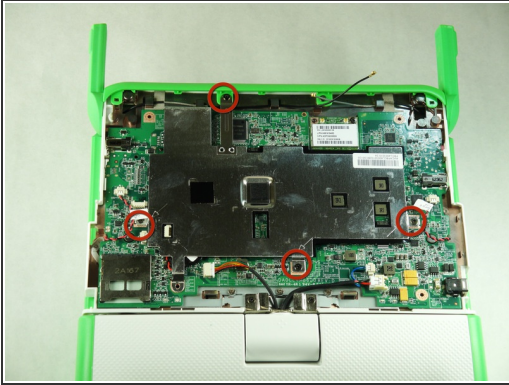

- Remove the four black 4mm screws from the metal cover using a Phillips #1 screwdriver.
- Remove the metal cover from the laptop.


Step 18

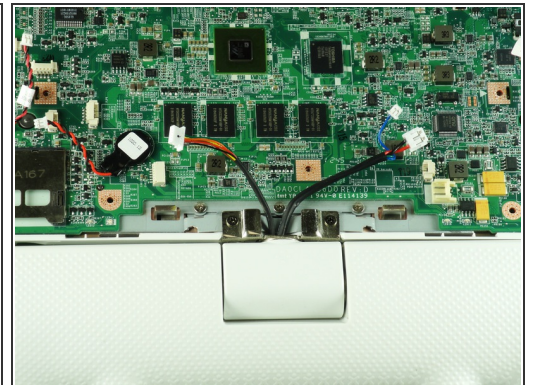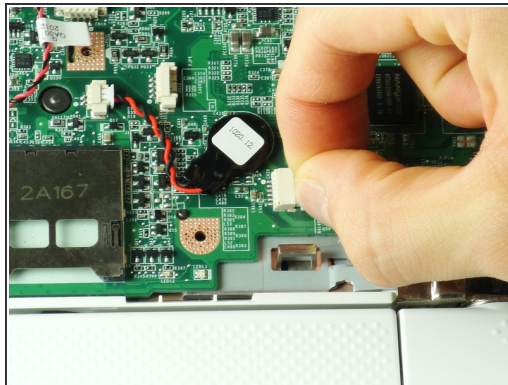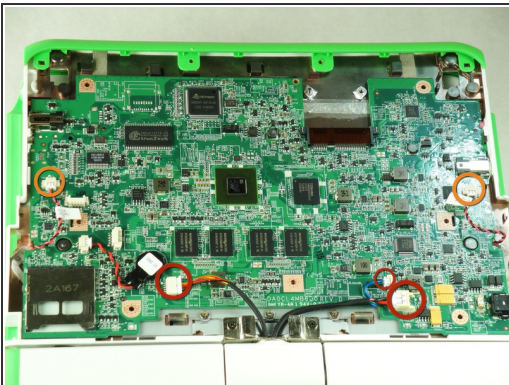

⚠ Pull the connectors out by holding the plastic tabs and not the wires.


- Unplug the three wires connecting the motherboard to the bottom half of the laptop.
- Unplug the two speaker wires from the motherboard.

Step 19

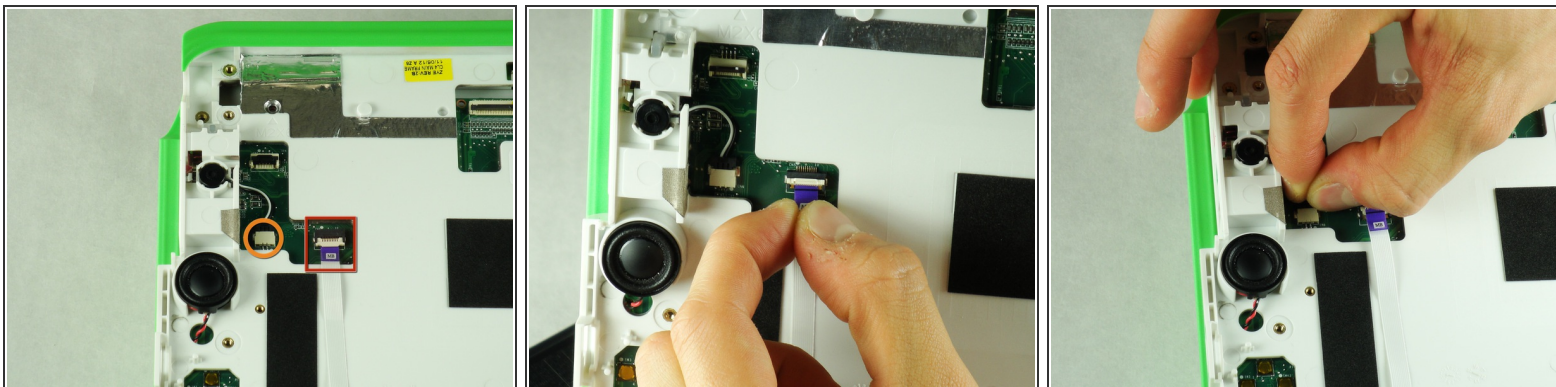



- Turn the device over to where the screen used to be.
- Pull out ribbon cable by holding the purple plastic tab.
- Pull out connector with the black and white wire by holding plastic tab.

Step 20

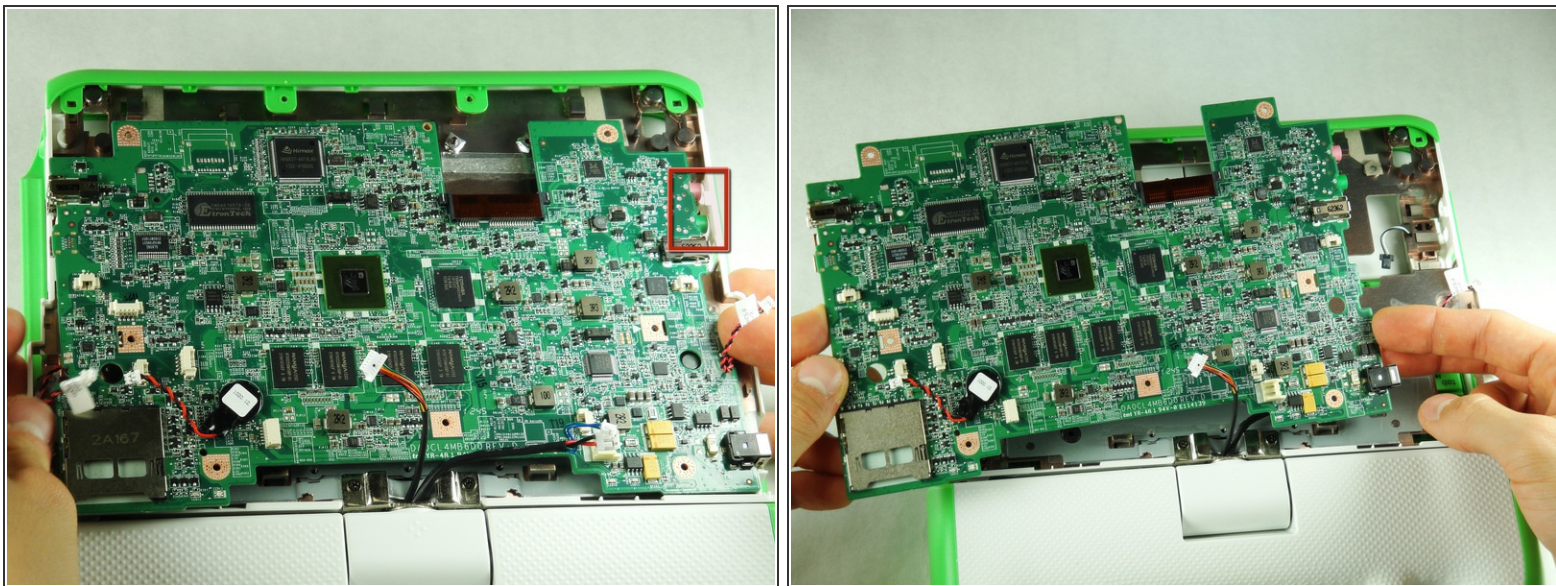

- Move the motherboard slightly to the left so that the audio input and output jacks are out of the frame.
- Pull the motherboard out of the laptop.

Step 21 — Power Button

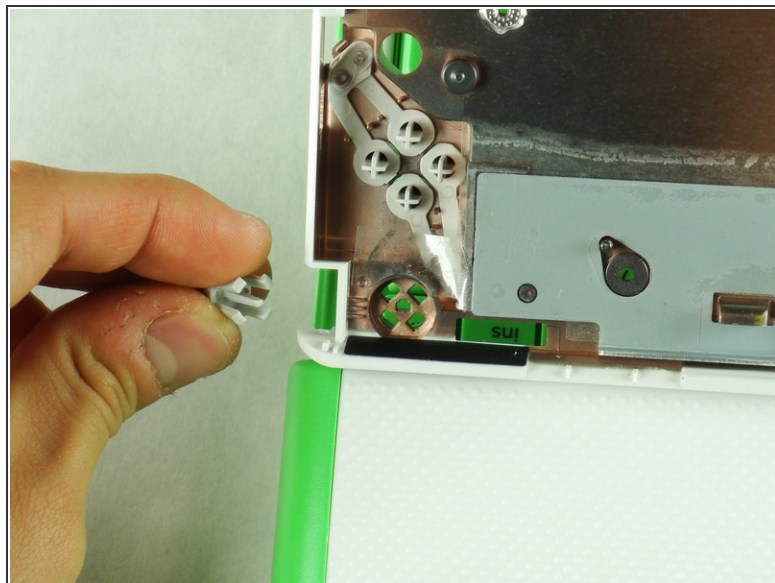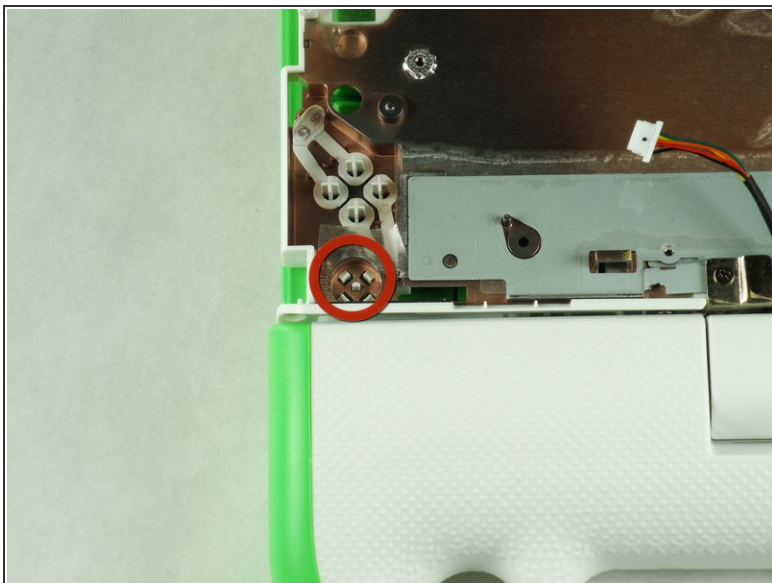

- Remove the power button by pinching in the four tabs until the power button can be pushed out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-16 08:22:54 AM.